


How to hardware reset the BF-430 Serial Device Server

Resetting the BF-430 is a relatively simply procedure:

1. Disconnect the BF-430 from the power supply.
2. Use a paper clip or similar to press the reset button located behind the enclosure on the top side of the unit.
3. Press and hold the reset button while connecting the power.
4. Continue holding the reset button pressed for about 3 – 6 seconds.
5. Release the reset button. The unit is now reset to factory settings.

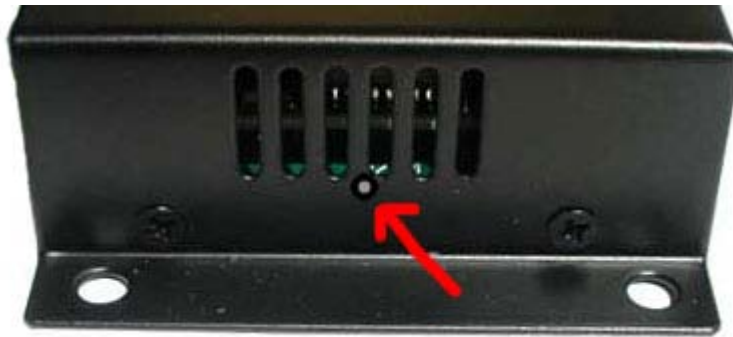

Hole for reset button located on top side of unit.