

# BF43x Server/Client settings

(Also called tunnel mode or peer-to-peer mode)

TYPE: STATIC IP

IP Address	192 . 168 . 168 . 125
Subnet mask	255 . 255 . 255 . 0
Gateway	192 . 168 . 168 . 254
Primary DNS	168 . 95 . 1 . 1
<b>Serial Port Mode</b>	
Serial Type	RS232
Baud Rate	19200 (User Defined)
<b>Operation Mode</b>	
Connection Mode	TCP SERVER
Connection Port Number	50000
Remote Host IP Address (For Client Only)	0 . 0 . 0 . 0

APPLY | CANCEL | BACK

## Server:

**IP Address/Subnet mask/Gateway/Primary DNS:** Enter required IP information.

**Connection Mode:** Select TCP SERVER

**Connection Port Number:** Enter unused port number (1 ~ 65536)

TYPE: STATIC IP

IP Address	192 . 168 . 168 . 125
Subnet mask	255 . 255 . 255 . 0
Gateway	192 . 168 . 168 . 254
Primary DNS	168 . 95 . 1 . 1
<b>Serial Port Mode</b>	
Serial Type	RS232
Baud Rate	19200 (User Defined)
<b>Operation Mode</b>	
Connection Mode	TCP CLIENT
Connection Port Number	50000
Remote Host IP Address (For Client Only)	192 . 168 . 168 . 125

APPLY | CANCEL | BACK

## Client:

**IP Address/Subnet mask/Gateway/Primary DNS:** Enter required IP information.

**Connection Mode:** Select TCP CLIENT

**Connection Port Number:** Enter same port number of BF430 working as TCP SERVER

**Remote Host IP Address:** Enter IP of BF430 working as TCP SERVER