

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:
230400
115200
57600
38400
19200
9600
4800
2400
1200

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:
None
RTS
CTS
RTS+CTS

Connection Type:

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:
Socket
RFC2217

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:

Server/Client Mode:
UDP
Http client

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Basic x +

Not secure | 192.168.0.3/Basic.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard Cloud Status

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:

Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
This is effective only for TCP server under Socket or VCOM mode.

Save Apply

Serial Settings

Device Name:
Device name can be up to 16 characters.

Data Baud Rate:

Data Bits:

Data Parity:

Stop Bits:

Flow Control:

Serial to Network Settings

Operation Mode:

Connection Type:



Server/Client Mode:

Modbus tcp:

Server Listening Port:
Please enter an integer between 10-65535.

TCP Server Connections:
 Socket or VCOM

Apply

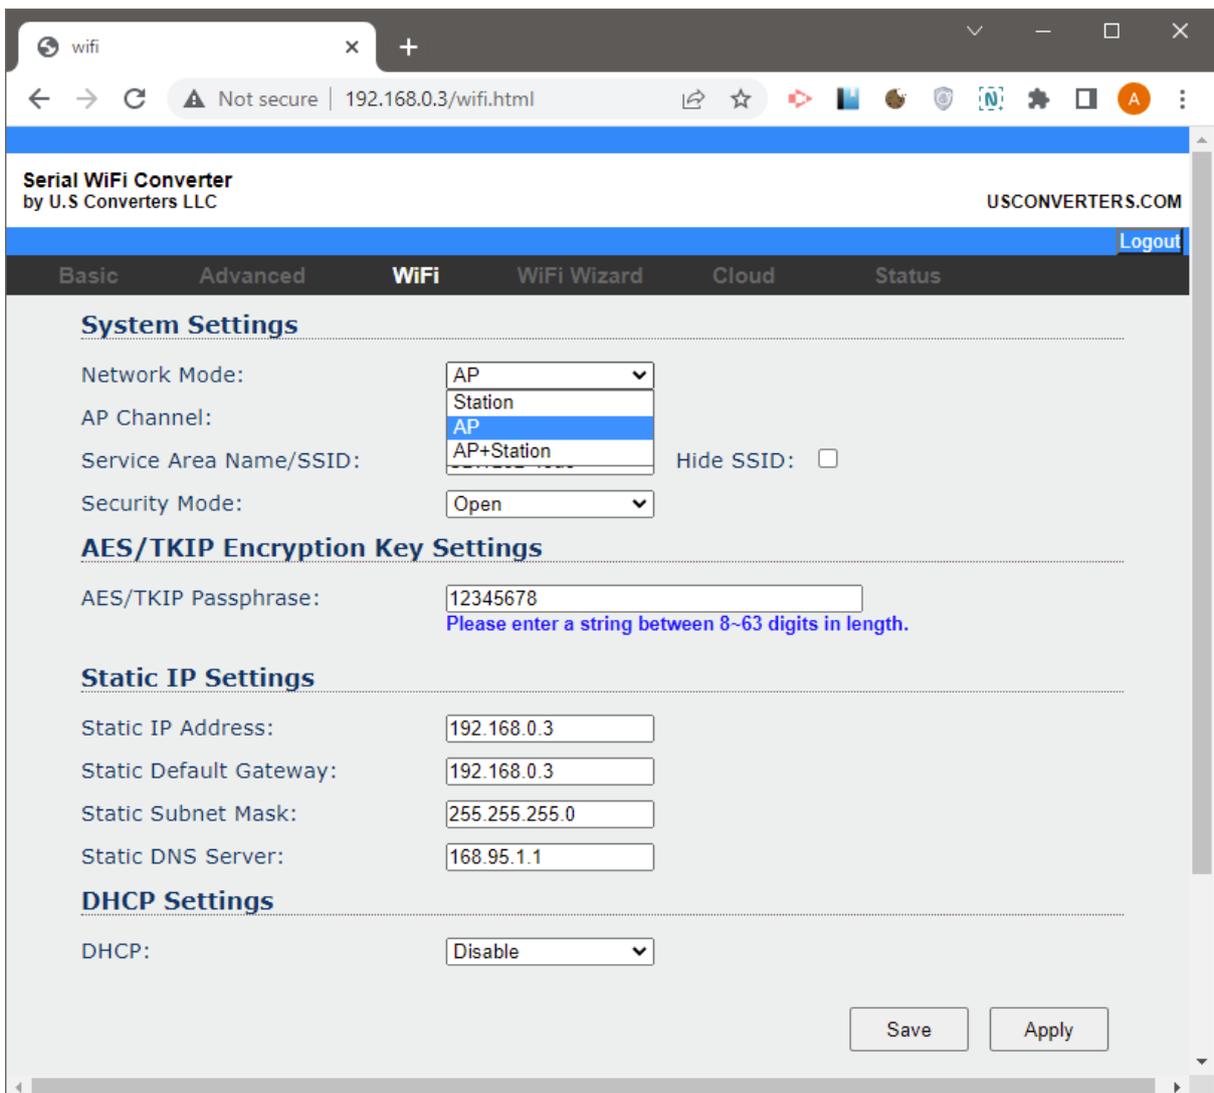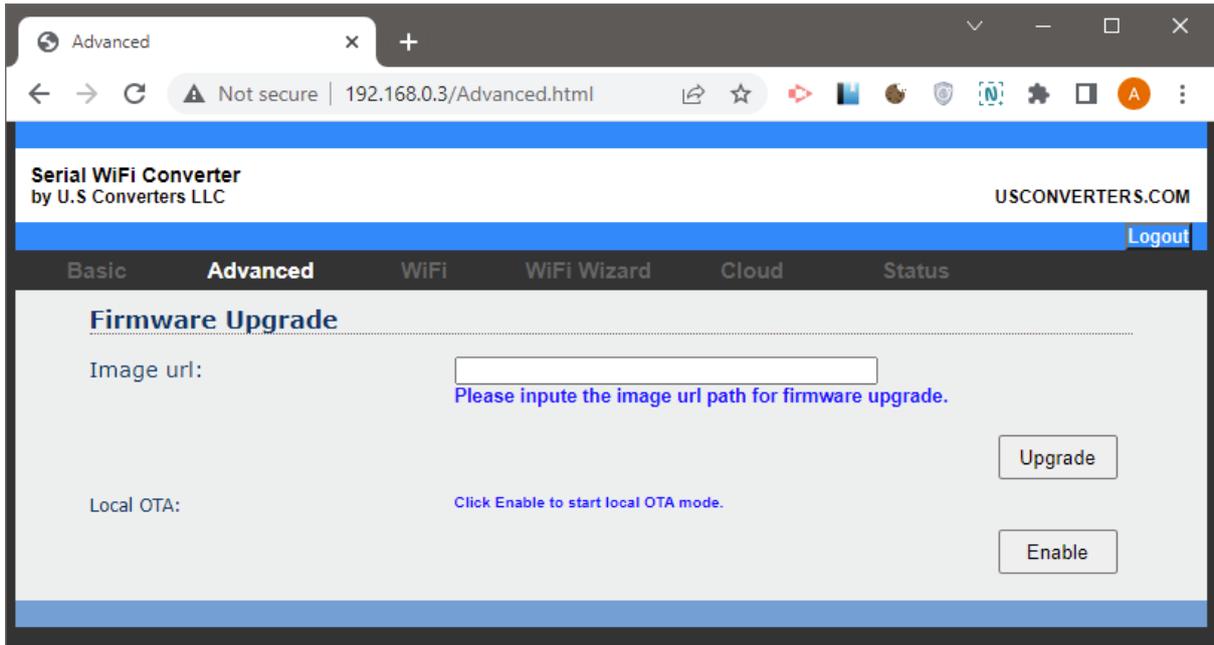

wifi x +

Not secure | 192.168.0.3/wifi.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced **WiFi** WiFi Wizard Cloud Status

System Settings

Network Mode: AP

AP Channel: 8

Service Area Name/SSID: Hide SSID:

Security Mode:

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14

AES/TKIP Encryption Key Settings

AES/TKIP Passphrase: between 8-63 digits in length.

Static IP Settings

Static IP Address:

Static Default Gateway:

Static Subnet Mask: 255.255.255.0

Static DNS Server: 168.95.1.1

DHCP Settings

DHCP: Disable

Save Apply

wifi x +

Not secure | 192.168.0.3/wifi.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced **WiFi** WiFi Wizard Cloud Status

System Settings

Network Mode: AP

AP Channel: 8

Service Area Name/SSID: S2W232-45a5 Hide SSID:

Security Mode: Open

AES/TKIP Encryption Key S

AES/TKIP Passphrase:

Please enter a string between 8-63 digits in length.

Static IP Settings

Static IP Address: 192.168.0.3

Static Default Gateway: 192.168.0.3

Static Subnet Mask: 255.255.255.0

Static DNS Server: 168.95.1.1

DHCP Settings

DHCP: Disable

Save Apply

wifi x +

Not secure | 192.168.0.3/wifi.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced **WiFi** WiFi Wizard Cloud Status

System Settings

Network Mode: AP

AP Channel: 8

Service Area Name/SSID: S2W232-45a5 Hide SSID:

Security Mode: Open

AES/TKIP Encryption Key Settings

AES/TKIP Passphrase: 12345678
Please enter a string between 8-63 digits in length.

Static IP Settings

Static IP Address: 192.168.0.3

Static Default Gateway: 192.168.0.3

Static Subnet Mask: 255.255.255.0

Static DNS Server: 168.95.1.1

DHCP Settings

DHCP:
Disable
Disable
Enable

Save Apply

wifi_wz

Not secure | 192.168.0.3/wifi_wz.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi **WiFi Wizard** Cloud Status


Welcome to the WiFi Setup Wizard

Use site survey tool to join a WiFi AP.

ID	BSSID	SSID	TYPE	CH	SIGNAL	SECURITY
0	0:f:15:c:c8:6	CoronaExtra	Infra	3	-53	WPA2_PSK
1	74:83:c2:81:43:f2	CoronaExtra	Infra	11	-77	WPA2_PSK
2	f4:92:bf:c4:4:9a	Idylvaenget18	Infra	6	-84	WPA2_PSK
3	48:ee:c:29:36:5c	dlink-365C	Infra	11	-85	WPA_WPA2_PSK
4	44:e9:dd:8e:70:e6	HomeBox-70E0_2.4G	Infra	1	-90	WPA2_PSK

Status: Scanning...OK

Scan Next

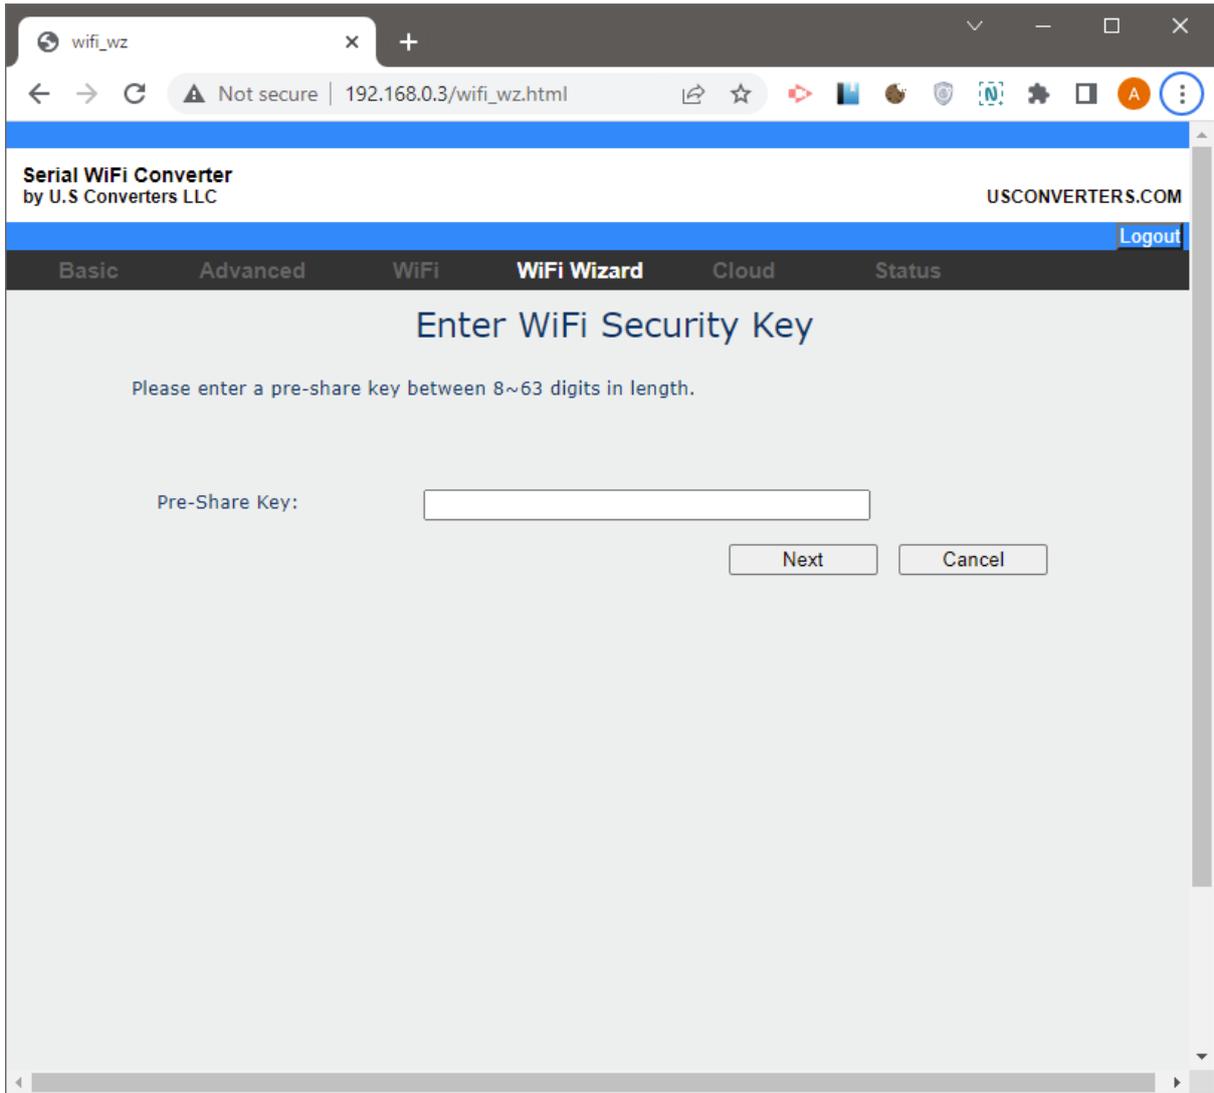

wifi_wz x +

Not secure | 192.168.0.3/wifi_wz.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM


Logout

Basic Advanced WiFi **WiFi Wizard** Cloud Status

Your WiFi network settings are as below

You can press "Accept" button to take effect.

Service Area Name/SSID:	CoronaExtra
AP Channel:	11
Security Mode:	WPA2_PSK
DHCP Client:	<input type="button" value="Enable"/> <input type="button" value="Disable"/> <input type="button" value="Enable"/>

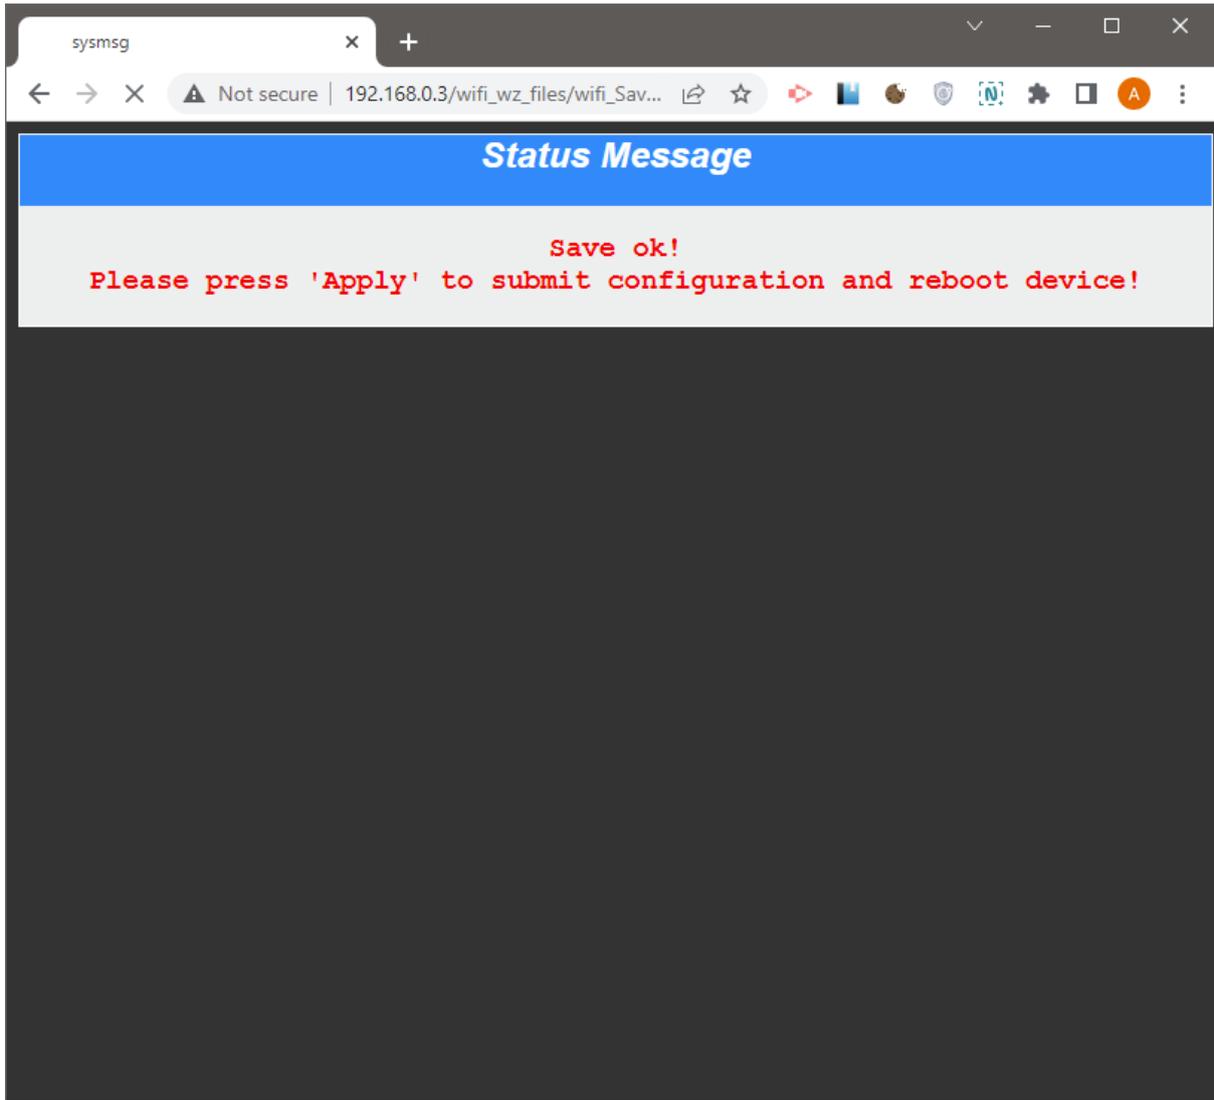

sysmsg

Not secure | 192.168.0.3/wifi_wz_files/wifi_Sav...

Status Message

Save ok!

Please press 'Apply' to submit configuration and reboot device!

Basic x +

Not secure | 192.168.0.3/cloud.html

Serial WiFi Converter
by U.S Converters LLC

USCONVERTERS.COM

Logout

Basic Advanced WiFi WiFi Wizard **Cloud** Status

MQTT Setting

Server URL/HostName:

Server PORT:

MQTT Client ID:
Length should be less than or equal to 200 bytes.

Username:
Length should be less than or equal to 200 bytes.

Password:
Length should be less than or equal to 200 bytes.

Publish MQTT Topic:
Length should be less than or equal to 128 bytes.

Subscribe MQTT Topic:
Length should be less than or equal to 128 bytes.

MQTT Scheme:

MQTT_CA:

MQTT_Client_CRT:

MQTT_Client_KEY:

AWS IOT MQTT Setting

Server HostName:

Server PORT:

MQTT Client ID:
Length should be less than or equal to 200 bytes.

Publish MQTT Topic:
Length should be less than or equal to 128 bytes.

Subscribe MQTT Topic:
Length should be less than or equal to 128 bytes.

MQTT Scheme:

Basic x +

Not secure | 192.168.0.3/cloud.html

Subscribe MQTT Topic:
Length should be less than or equal to 128 bytes.

MQTT Scheme:

MQTT_CA:

MQTT_Client_CRT:

MQTT_Client_KEY:

Ali IOT MQTT Setting

Server HostName:

Server PORT:

MQTT Client ID:
Length should be less than or equal to 200 bytes.

Publish MQTT Topic:
Length should be less than or equal to 128 bytes.

Subscribe MQTT Topic:
Length should be less than or equal to 128 bytes.

MQTT Scheme:

PRODUCT_KEY:

DEVICE_NAME:

DEVICE_SECRET:

Azure Setting

Server HostName:

HUB name:

Device ID:
Length must be 11 bytes,where is serial number.

Device Keys:

Expire Time:
Length must be 10 bytes,where is timestamp in UNIX form.

Save Apply

Browser window showing the status page of a Serial WiFi Converter. The page title is "Serial WiFi Converter by U.S Converters LLC" and the URL is "192.168.0.3/Status.html". The page is titled "System Status" and displays the following information:

Device Type:	WiFi to RS232
WiFi Mode:	AP mode
WiFi Connect SSID:	-
Network Mode:	TCP Server
Firmware Version:	(V2.92A)
WiFi MAC address(Hex):	3c:61:05:0b:45:a5
Client 1 IP & MAC:	IP: 192.168.0.4 , MAC: 14:91:82:2b:2c:1f
Client 2 IP & MAC:	-
Client 3 IP & MAC:	-
Client 4 IP & MAC:	-
Client 5 IP & MAC:	-

Or in STA mode:

The screenshot shows a web browser window with the following details:

- Browser tab: Status
- Address bar: Not secure | 192.168.0.3/Status.html
- Page title: Serial WiFi Converter by U.S Converters LLC
- Page URL: USCONVERTERS.COM
- Navigation menu: Basic, Advanced, WiFi, WiFi Wizard, Cloud, Status (selected)
- Logout button
- Section: System Status
- System Status details:
 - Device Type: WiFi to RS232
 - WiFi Mode: Station mode
 - WiFi Connect SSID: CoronaExtra
 - Network Mode: TCP Server
 - Firmware Version: (V2.92A)
 - WiFi MAC address(Hex): 3c:61:05:0b:45:a5
 - Client 1 IP & MAC: IP: 192.168.0.4 , MAC: 14:91:82:2b:2c:1f
 - Client 2 IP & MAC: -
 - Client 3 IP & MAC: -
 - Client 4 IP & MAC: -
 - Client 5 IP & MAC: -